

SuperCPE Quick Start Guide

1. After powering up the SuperCPE with the PoE injector, connect the managing computer to the LAN port on the PoE with an Ethernet cable.
2. Configure the Ethernet port for DHCP.
3. Once an address is assigned (192.168.2.X), open a web browser and enter 192.168.2.254 into the address bar and hit enter.
4. In the web management GUI, click on the Wireless Folder on the left hand menu and select Basic Settings. Change the mode to client.
5. The SuperCPE will reboot and will go back to the root menu. Select the Operation Mode page, and change it to Wireless ISP.
6. The SuperCPE is now configured in client mode. From here a site survey can be performed under the Wireless settings, and the IP address subnets can be configured under the TCP/IP settings.

For all other information download the user manual at

www.valuepointnet.com/support/downloads.html